

FIGURE 21-25

MACRO

The last button we will discuss in this group offers spectacular convenience. TriCaster's powerful macro system is fully addressable from TC1SP. A macro can be assigned to any button on the surface in much the same manner as it can be assigned to a keyboard button. The steps are as follows:

1. On TriCaster's *Live Desktop*, open the *Macro Configuration Editor*.
2. Select the macro you wish to assign in the onscreen lister.
3. Click the mouse in the *Listen* field at bottom left.
4. Hold down the *MACRO* button and press a suitable button on the control surface.

That's it – you can close the *Macro Configuration* panel and test the result. To play back the macro at any time, press the *MACRO* button along with the assigned key.

COMP

When the *COMP* button is held down, the buttons in the *Switcher* or *M/E* rows at left correspond to the same numbered *COMPs* for the delegated bus.

- Pressing a button in the *DSK/KEY* row recalls the corresponding *COMP*.
- Pressing a button in the *PGM/A* row stores or updates the corresponding *COMP*.
- Pressing a button in the *PREV/B* row clears the corresponding *COMP*.

Hint: See the sub-heading Utility Knobs (A, B, & C) for additional Comp control features.

PTZ OPERATIONS

- **PTZ SEL** – Hold this button down and press button 1-8 in the *KEY* row at left to designate which of up to eight connected PTZ cameras to control.
- **PST STORE** – Hold this button down and press button 1-11 in the *KEY* row at left to store the current *PTZ* position for the currently selected camera to the designated *PTZ* preset.
- **PST CALL** – Hold this button down and press button 1-11 in the *KEY* row at left to recall the designated *PTZ* preset for the currently selected *PTZ* camera.

UTILITY KNOBS (A, B, & C)

- **Knob A** – With the *COMP* or *PTZ Sel* button pressed down, twist *knob A* to:
 - Pop up either the *Comp bin* or *PTZ preset bin*, respectively, for the current *M/E* or *PTZ* delegate (if multi-delegated, the bin for the first delegate only)
 - Advance through the selections in the bin as you continue to twist the knob
 - Apply the highlighted *Comp/PTZ Preset* by pushing the knob.
- **Knob B** - Cycle through the color link assignments for the *A* or *C* row (depending on the *M/E Layers* buttons state) for the currently delegated *M/E*.

Knob C - Cycle through the color link assignments for the *B* or *D* row (depending on the *M/E Layers* buttons state above) for the currently delegated *M/E*.

21.2.7 MEDIA PLAYERS

Let's explore the details of the *MEDIA PLAYER* control group (depending on your control surface model, there may be one or two such control groups).

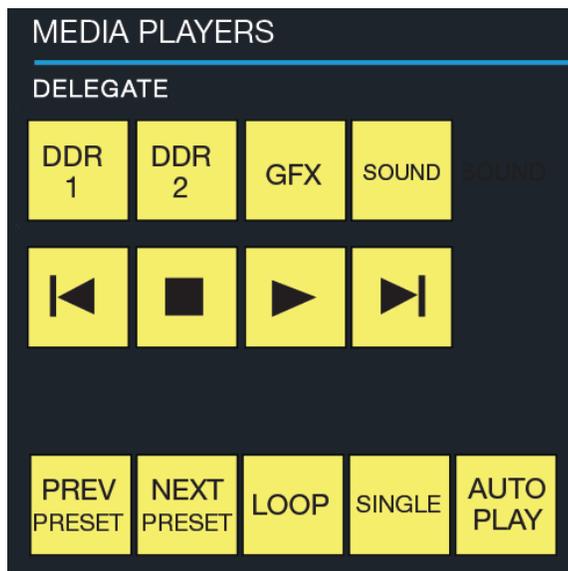


FIGURE 21-26

DELEGATES

The *Delegate* buttons determine which players are governed by operations in this group. Multi-selection is supported.

PREV PRESET/NEXT PRESET

These two buttons let you to cycle backwards or forwards respectively through existing presets for the delegated *Media Player*.

LOOP, SINGLE, AND AUTOPLAY

Click these buttons to toggle the *Loop*, *Single* and *Autoplay* modes for the delegated players.